


GET TO KNOW YOUR TRANSMITTER

Introduction of transmitter

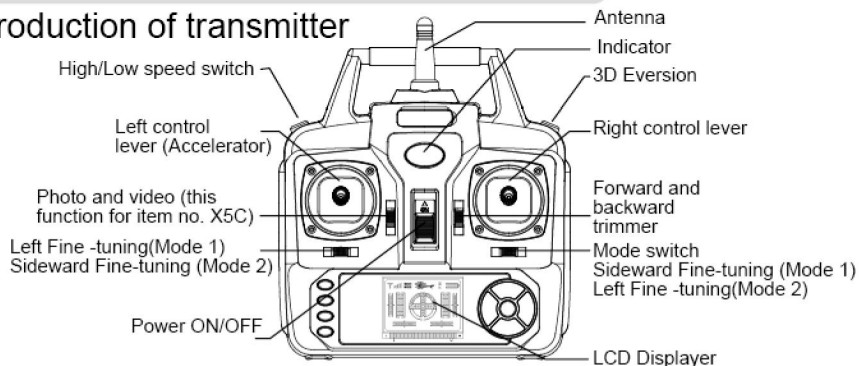

Remote control Installing the battery

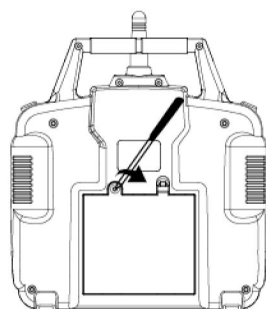


Figure 1


 
 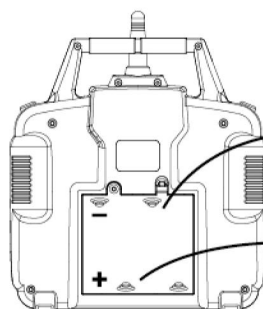


Figure 2



Battery Cover



4 X AA(LR06)
1.5V Batteries

1. Use a screwdriver to remove the screw on the back of transmitter, then open the battery cover (Figure 1).
2. Install 4 "AA" batteries (not included) into the back of transmitter then replace battery cover and reinstall the screw (Figure 2).



1. Install batteries with correct polarity.
2. Do not mix old and new batteries.
3. Do not mix different types of batteries.

REMOTE CONTROL KEYPAD AND LCD MANUAL

